





Смазка

Lubrication

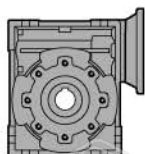


CM	Количество смазки (литры) / Oil quantity (liters)					
	B3	B8	B6	B7	V5	V6
026			0.02			
030			0.04			
040			0.07			
050			0.1			
063			0.25			
075			0.3			
090			0.85			
110			1.5			
130	4.5	3.3	3.5	3.5	4.5	3.3

На весь срок эксплуатации
Life lubricated

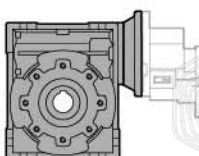


CMP	Количество смазки (литры) / Oil quantity (liters)					
	B3	B8	B6	B7	V5	V6
056/030			0.04			
056/040 - 063/040			0.07			
063/050 - 071/050			0.1			
063/063 - 071/063 - 080/063			0.25			
071/075 - 080/075			0.3			
071/090 - 080/090			0.85			
080/110			1.5			
080/130	4.5	3.3	3.5	3.5	4.5	3.3

На весь срок эксплуатации
Life lubricated

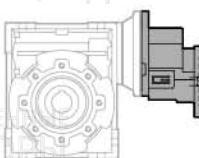


CMP			
056/030 056/040	063/040 063/050 063/063	071/050 071/063 071/075 071/090	080/063 080/075 080/090 080/110 080/130
На весь срок эксплуатации Life lubricated			

Монтажные позиции / Mounting positions

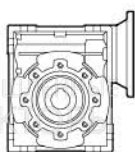


B3


(Стандарт)

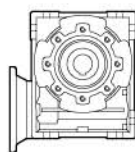


B8

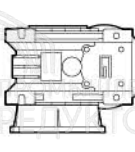


B6

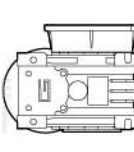

B7

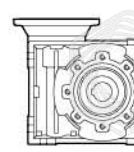

V5

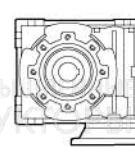

V6